




Wood Storage

Please look over
the instructions
before you start
assembling

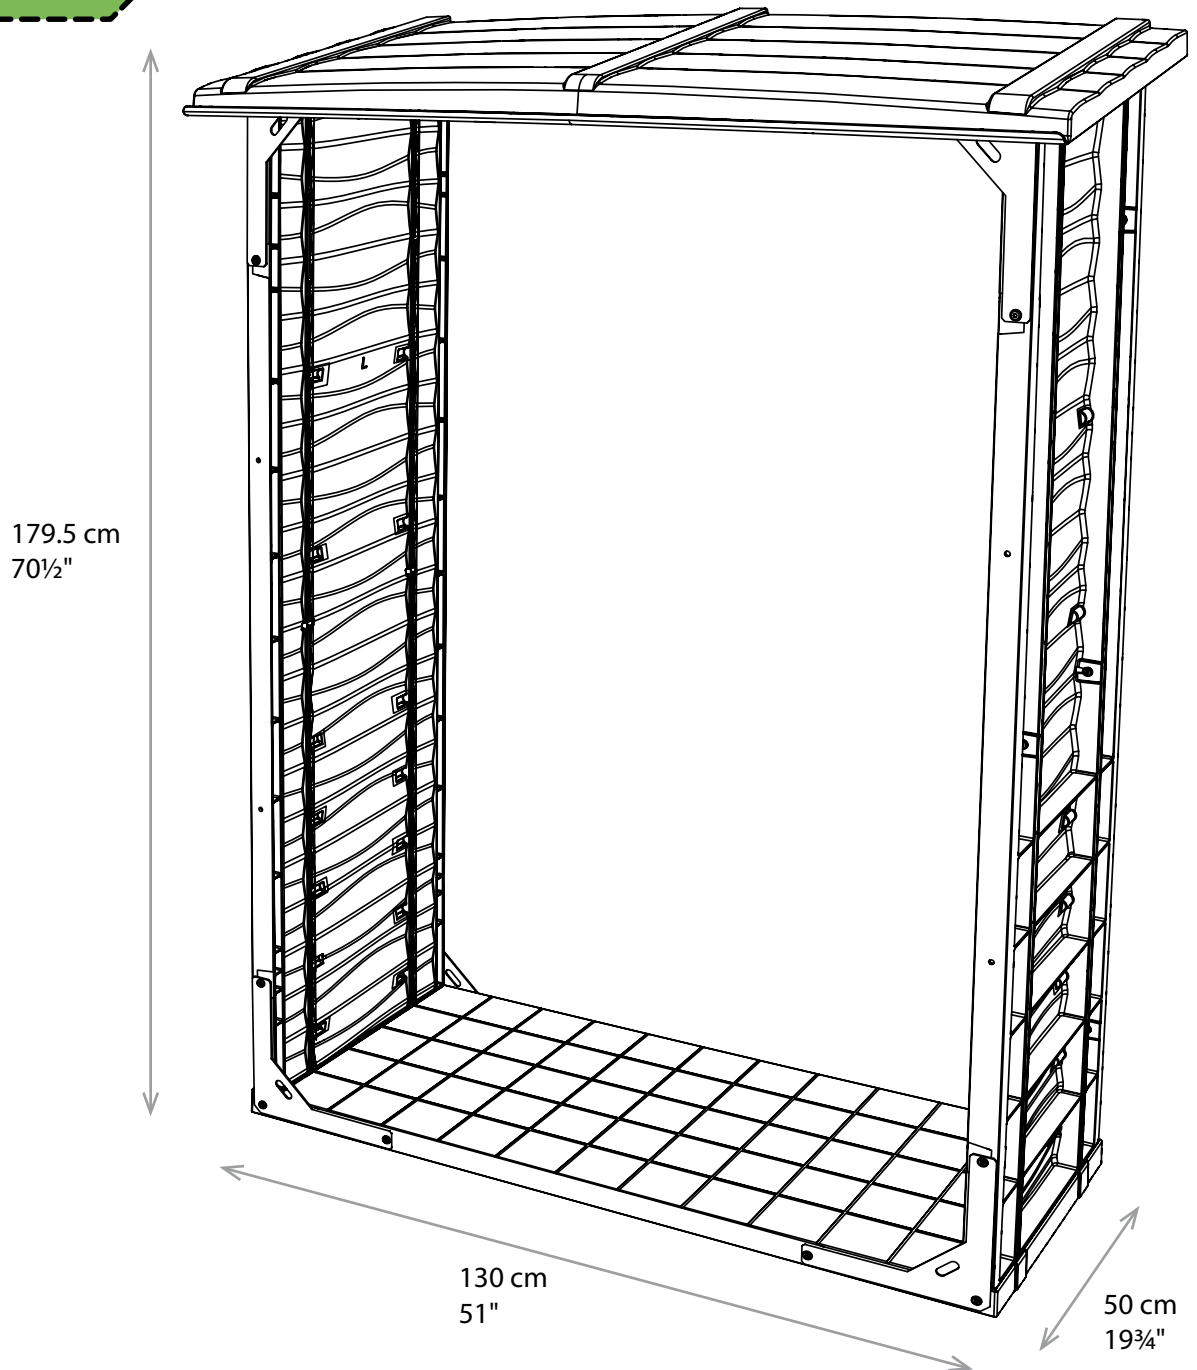


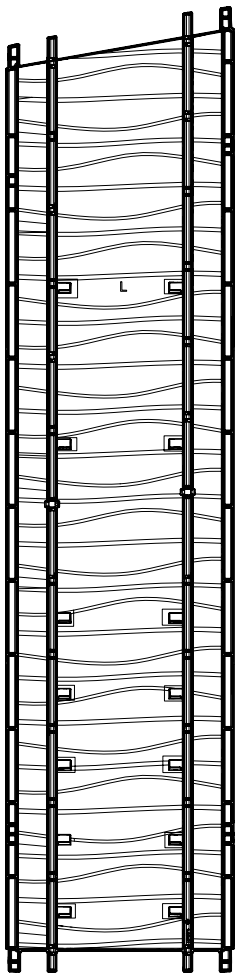


2-50-811
A x1

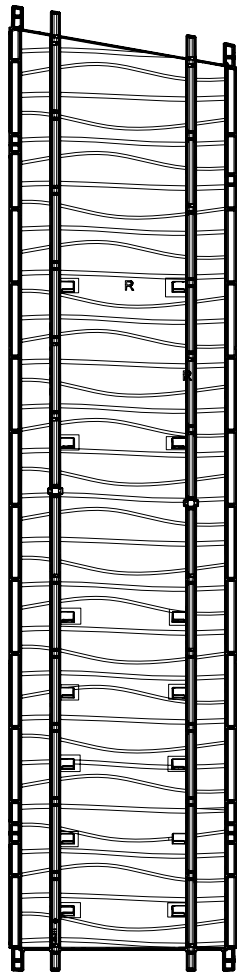


1-50-811
B x1

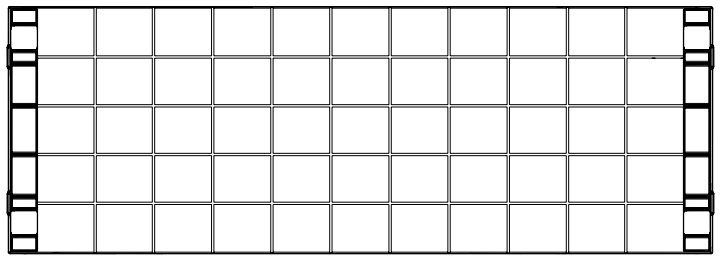


4-50-811
C x1

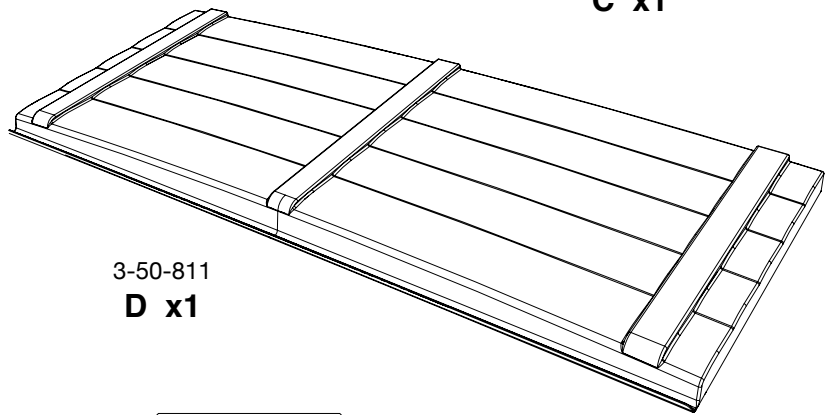


3-50-811
D x1

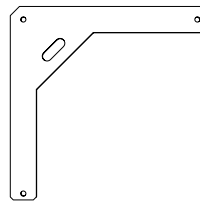


VPT050811.1
E x8




VPT01001
M6/15
F x 8




VPT01003
M6/35
G x 8




VPT01005
M6/42
H x 8

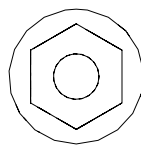

VPT 01006
M6
I X 24

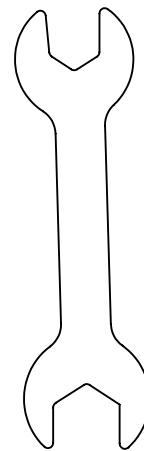


VPT000425
x1


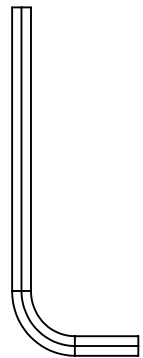


VPT000426
x1


1

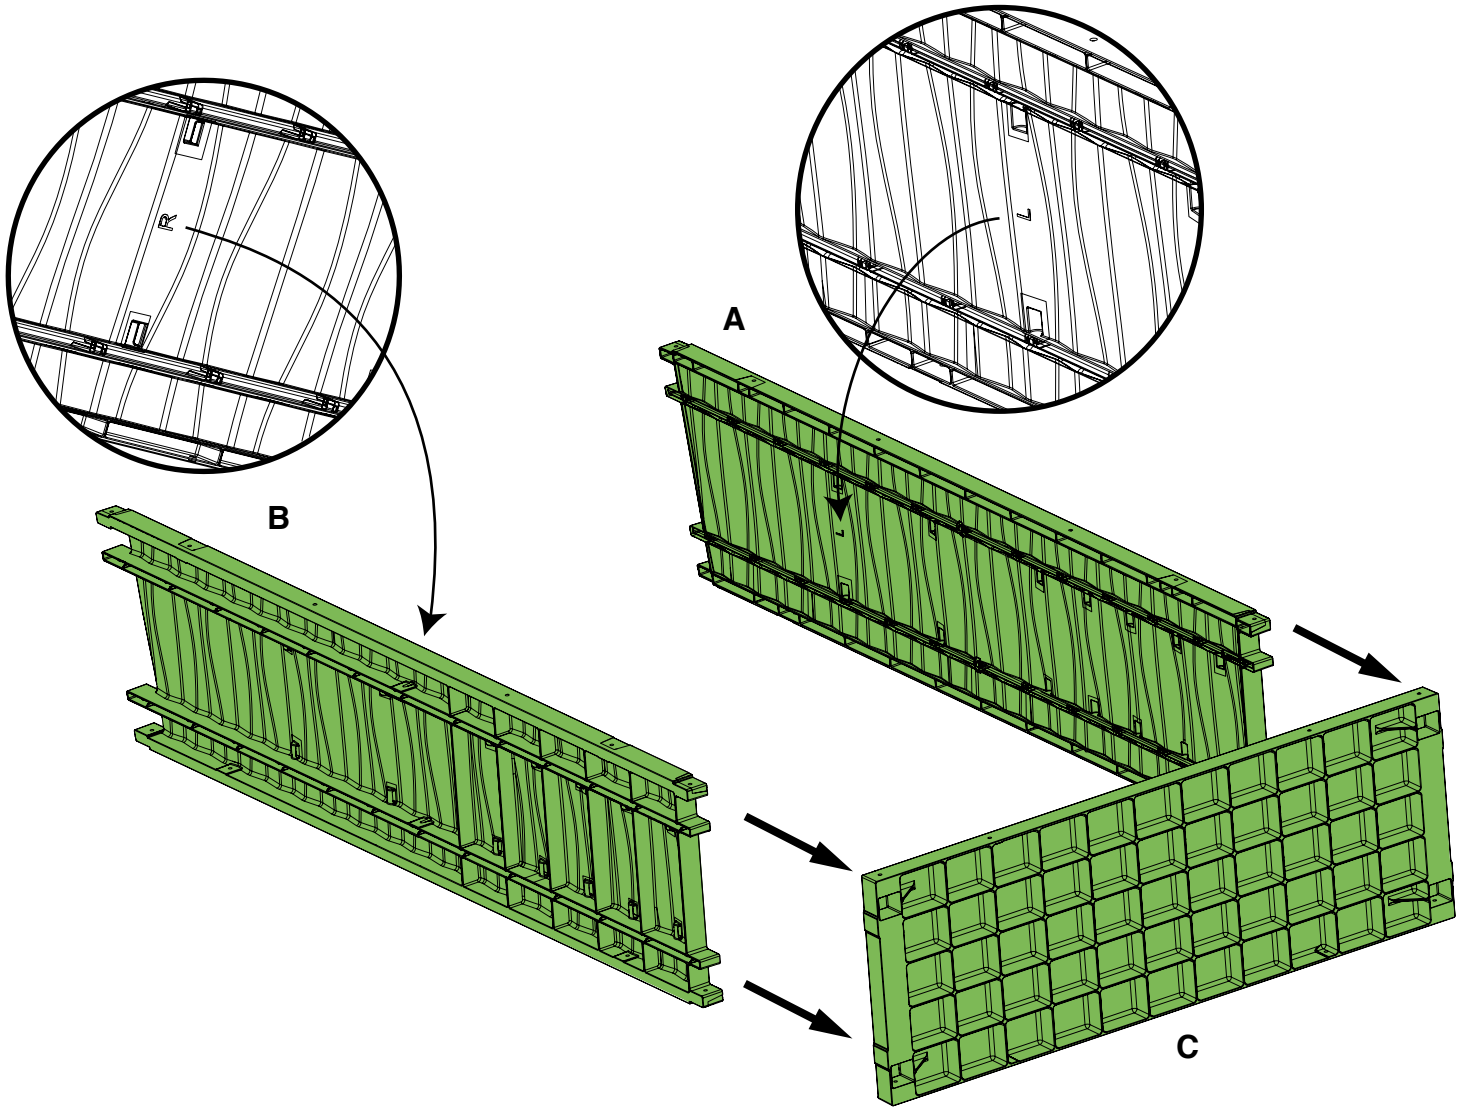

2


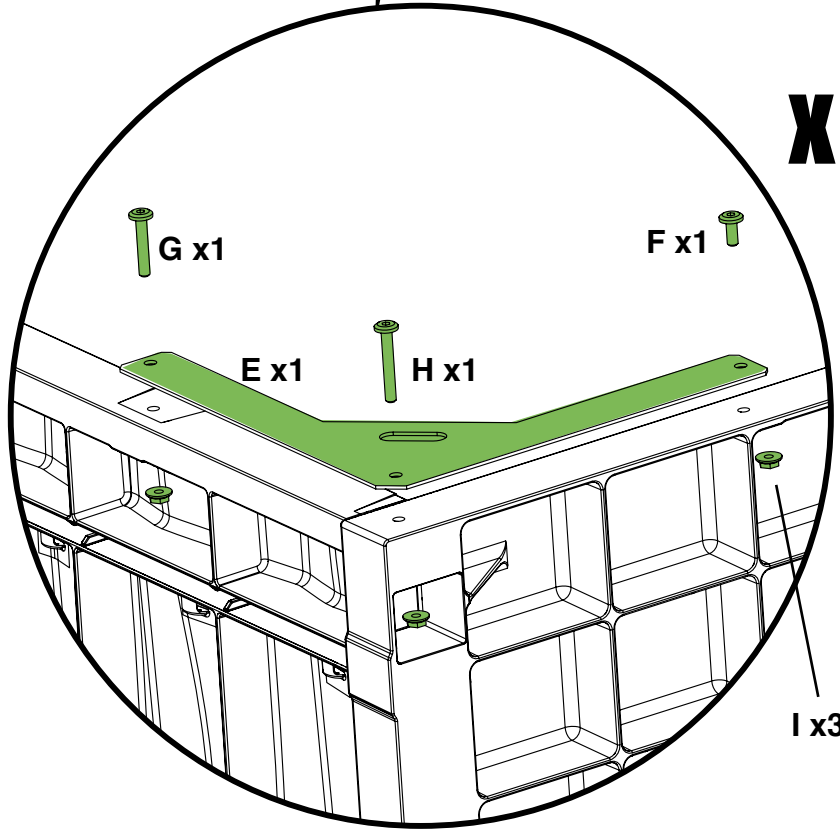
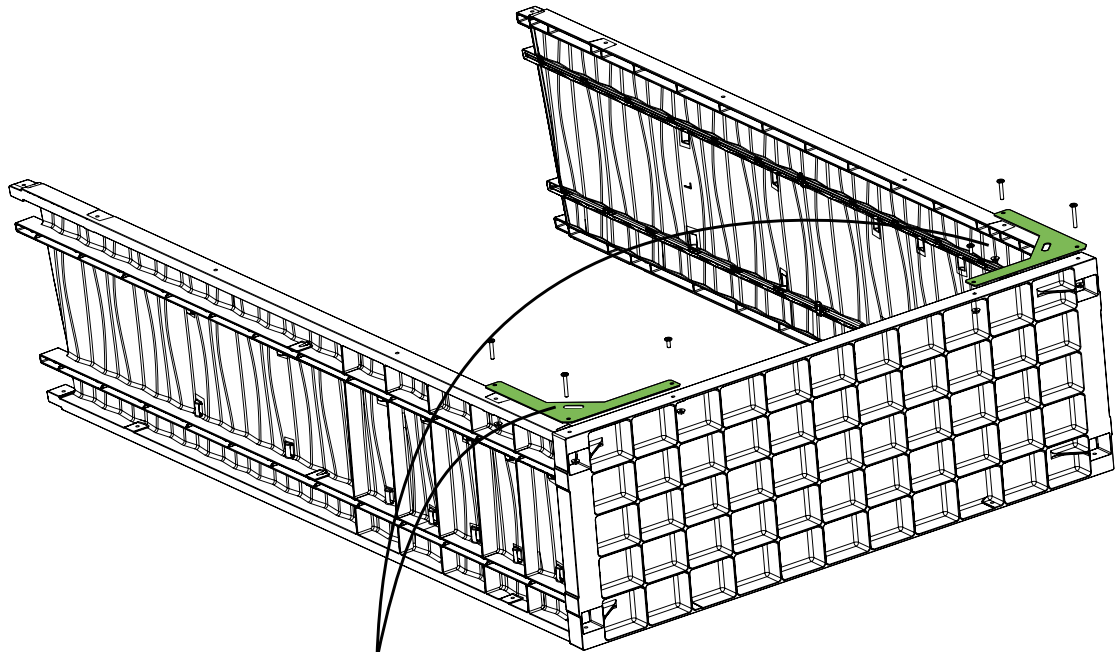


x2

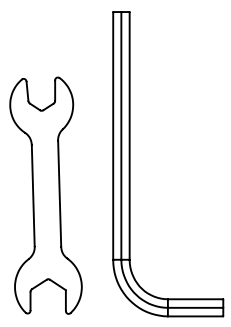


I x3


3

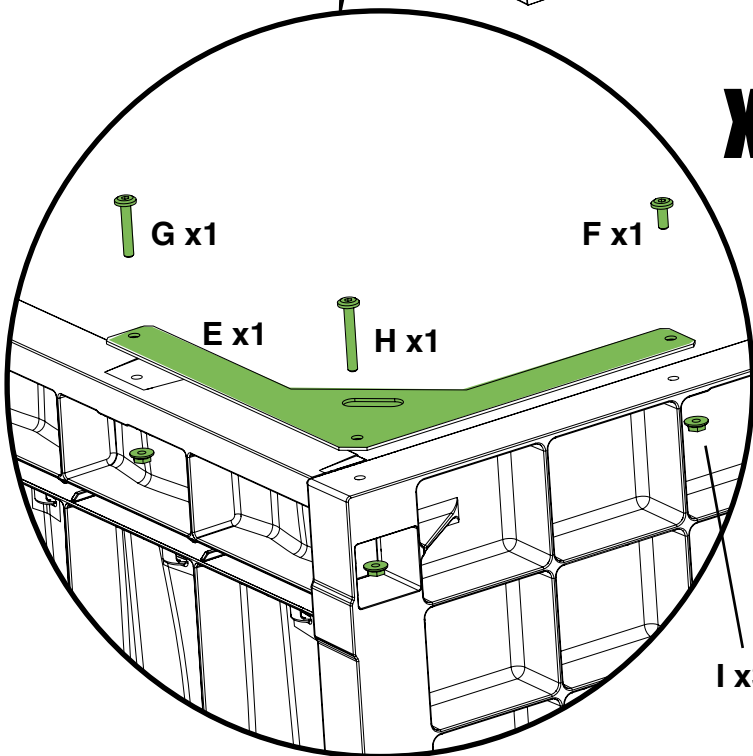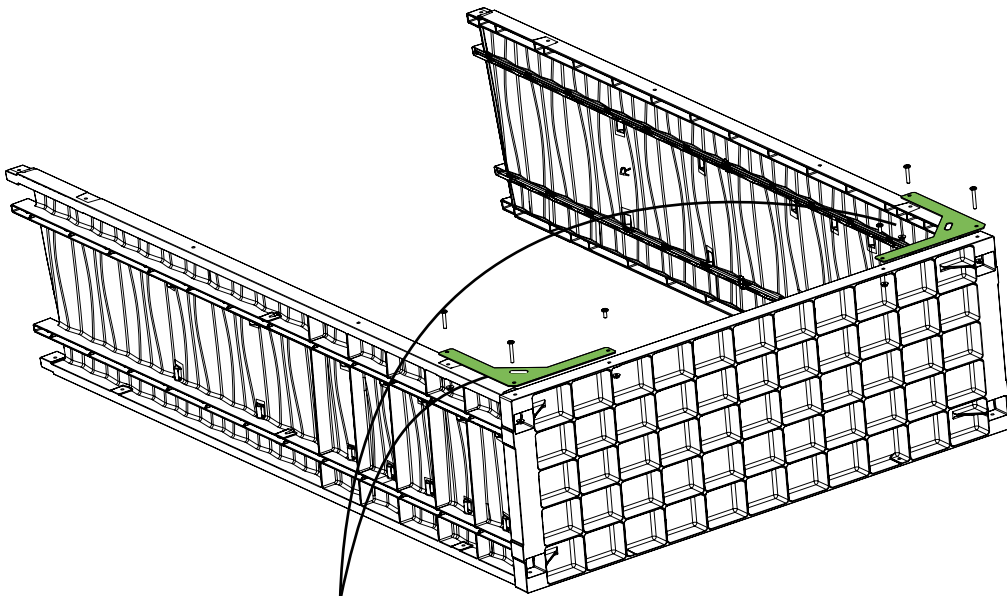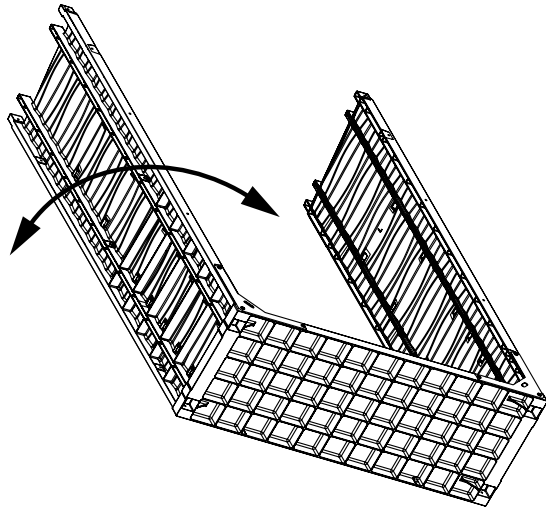


x2

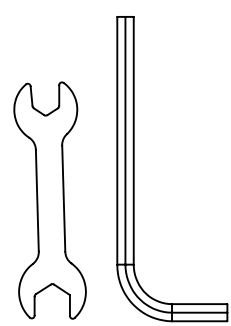

4

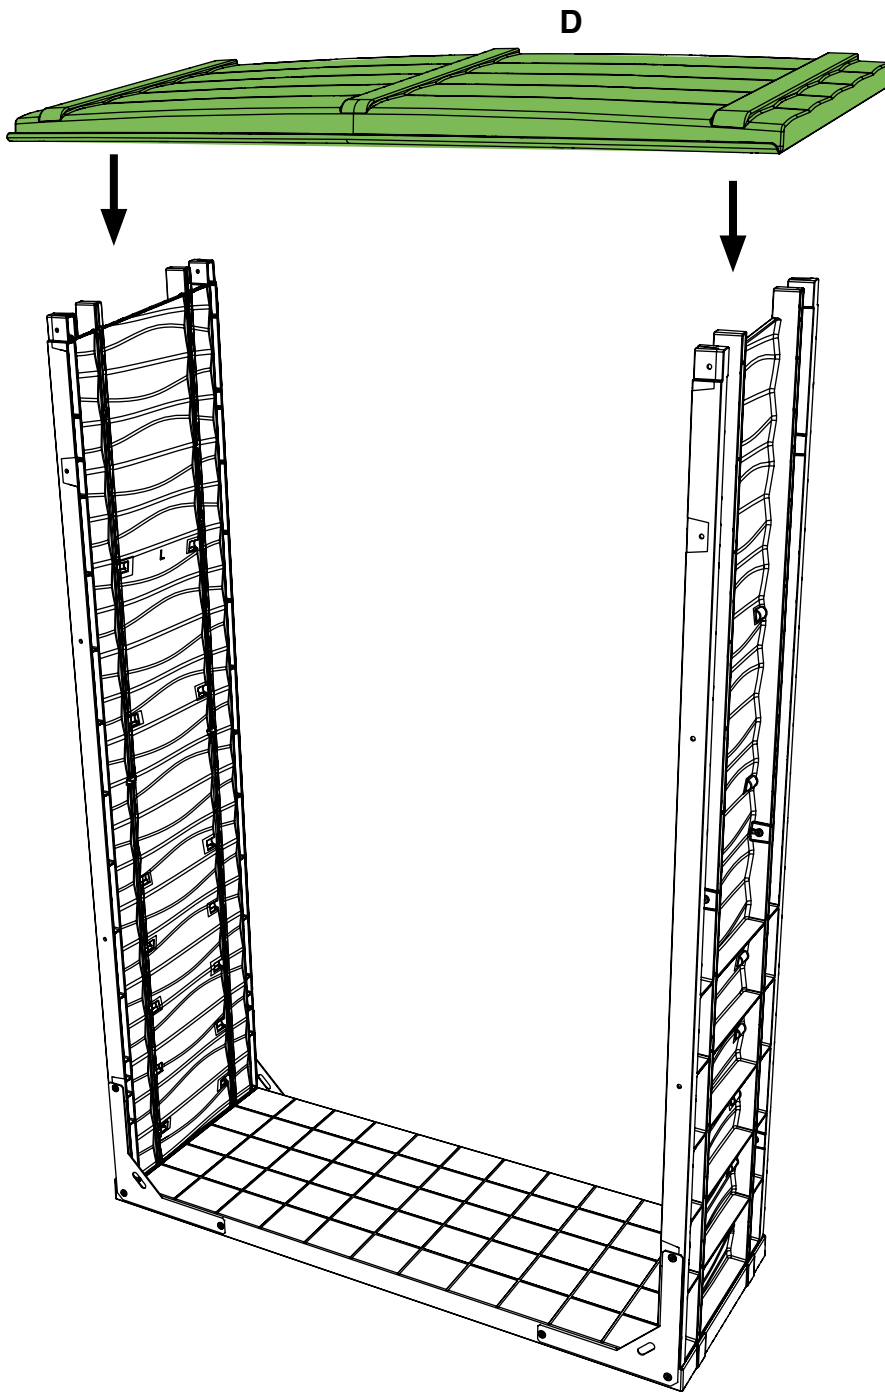

5

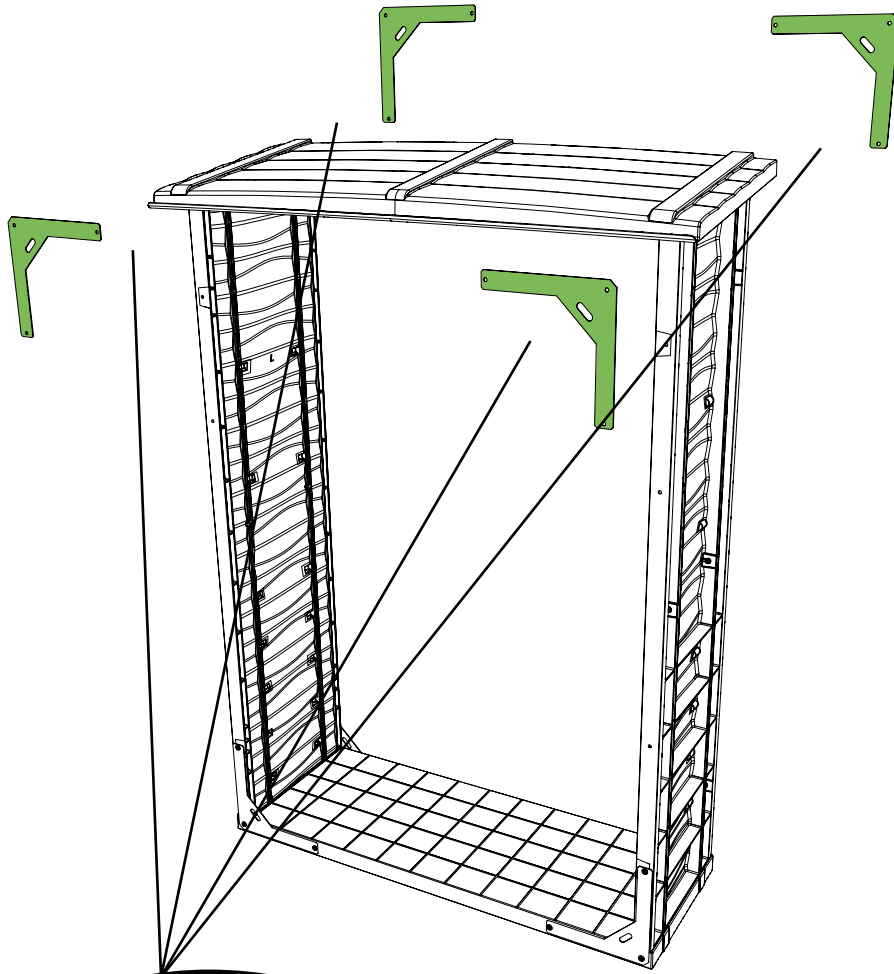

x4

